

ELINCHROM STUDIO APP / SOFTWARE

Speed up your workflow with the Elinchrom App / Software and take control of your light wherever you are.

 
- Control up to 20 units
- Save and reload presets
- Edit a friendly name
- Change group by drag & drop

Available on macOS, Windows, Android and iOS



www.elinchrom.com/range/app-software/

ELC CONNECTION

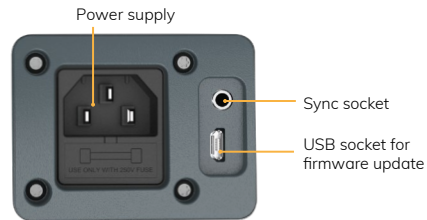

ERROR MANAGEMENT

Error	Description	Solution
1	Capacitor overvoltage	Switch the unit off, wait 2 minutes and switch the unit on again. If the error shows up again the unit requires a check-up at an authorized Elinchrom Service Centre.
4	Charge timeout	
6	Voltage unstable (Charge hold error)	
18	Discharge circuit error	
32	Head board type unknown	
33	14 VDC error	



www.elinchrom.ch/support



www.elinchrom.com



Elinchrom is a registered trademark of ELINCHROM LTD, RENENS, SWITZERLAND

QSG ELC 125 / 500 - 73332- 05.2022

Av. de Longemalle 11, CH-1020 Renens, Switzerland,
Tel. : + 41 21 637 26 77 / E-mail: elinchrom@elinchrom.ch

 **elinchrom®**

ELC

125 / 500
Monolight



 
Quick Start Guide

SETUP MENU


Radio	Mode	Off	Normal	Speed
	Group	1-4		
	Frequency	1-20		
Flash mode	Flash mode	Standard	Action	
	Recycling time	Eco	Fast	
	Flash before ready	No	Yes	
Photocell	Mode	Off	On	
Extras	Auto stand-by	Off	1-59 min.	
	Auto-off	Off	1-60 min.	
	Auto-on	No	Yes	
	Favorite function	Flash mode, Recycling time, Flash before ready, Skyport Group, Photocell Mode, Background		
Extras	Logo mode	Low, High, Off, Low on ready, High on ready		
	Logo color	Group color	White	
	Ready tone	1-12		
	Ready volume	Off, Min, Low, Default, High, Max		
	Error volume	Off, Min, Low, Default, High, Max		
	Keyboard click	Off, Min, Low, Default, High, Max		
	Background	Black	White	
Info	Friendly name	"ELC XXX-1" by default (set through computer), XXX = 125 / 500 depending on the model		
	Firmware rev.	*****		
	Skyport ID	*****		
	Life time	In hours (hhhh:mm)		
	Power-on count	How many times the units has been turned on		
	Flash count	Total flash number		

1. Menu selected
2. Selected menu options
3. Menu option settings navigation
4. Exit menu navigation
5. Back

Knob Button :
Scroll function to change setting /
press function to enter the menu option.

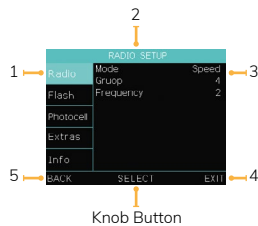


CONTROL PANEL

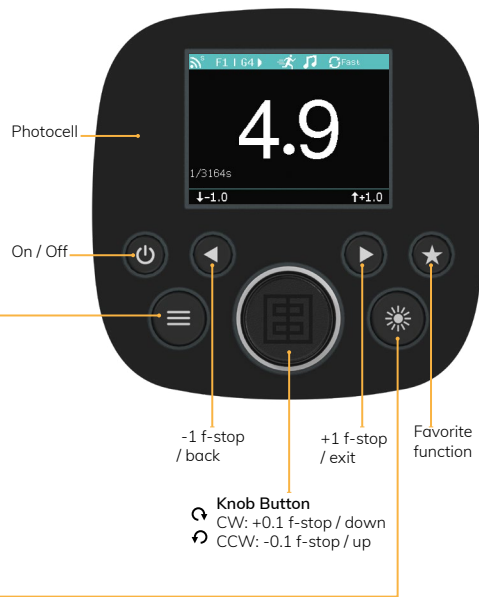 


MODELLING LAMP BUTTON

 Long press to enter the menu.
Press menu for Mode, VFC, Timer.

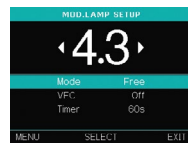

DISPLAY PANEL – DASHBOARD

 The colours of the upper bar correspond to the group number :
blue for the group 1, yellow for the group 2, red for the group 3
and green for the group 4.

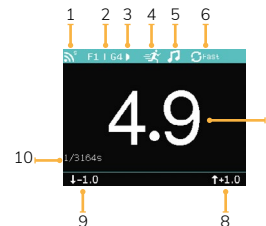

1. EL-Skyport Synchronisation (normal or speed sync mode)
2. EL-Skyport frequency channel and group number
3. Photocell status
4. Flash mode Action
5. Volume
6. Recycling time
7. Power setting in f-stop equivalents
8. Increase by 1 f-stop
9. Decrease by 1 f-stop
10. Flash Duration value